



PA

P10

PLATE Ref: No.	PART NO.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REF	
		ALL	T/C	T/C Fed.	Special	Spec. Fed.	LH	RH				
PA1	X050 P 0706W		1	1	1			*	*	Unit.Heater,		
PA2	A074 P 6002Z					1				Unit. Heater ,		
PA3	X050 P 0057V	2								Hose. Heater to Chassis Transfer Pipe,		
PA4	A046 P 6010V	AR								Hose. Chassis Transfer Pipe to Main System,		
PA5	A046 P 6010V	AR								Hose. Control Valve to Chassis Transfer Pipe,		
PA6	X036 P 6003Z	1								Valve. Heater Control,		
PA7	C074 P 0075Z	1								Cable. Heater Control,		
PA8	X036 P 0046Z	2								Hose. Heater to Demist Nozzle,		
PA9	X050 P 6047Z	1								Nozzle. Demist, L/H		
PA10	X050 P 6048Z	1								Nozzle. Demist, R/H		
PA11	X046 M 6195Z		1		1			*	*	Motor. Heater,		
PA12	W0050		3		3			*	*	Spacer.		
PA13	X054 B 1510Z		1		1			*	*	Grille.		
PA14	X046 P 6006Z	2								Hose. Face Level Vent,		
PA15	X054 P 0059Z	2								Connector. Inlet,		
	434	6								Rivet. Connector Securing,		
PA16	X046 B 6124Z	2								Vent. Face Level,		
PA17	X046 M 6205Z			1		1				Motor. Heater,		
PA18	A074 B 2110Z			1		1				Bracket.		

PLATE Ref: No.	PART NO.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REF
		ALL	T/C	T/C Fed.	Special	Spec. Fed.	LH	RH			
PA19	A074 B 2111Z			1		1			Bracket.		
PA20	X026 B 0373Z			1		1			Seal.		
PA21	A050 P 0049Z					1			Control. Heater,		
PA22	A050 P 0050Z					2			Knob. Heater Control,		
	342					2			Screw. Knob Securing,		
PA23	A074 P 0077Z					1			Cable. Heater Control, (long)		
PA24	A074 P 0076Z					1			Cable. Heater Control, (short)		